


# ///ADVENT

## AMP403

AM/FM/CD/MP3/WMA Receiver

### Owner's Manual

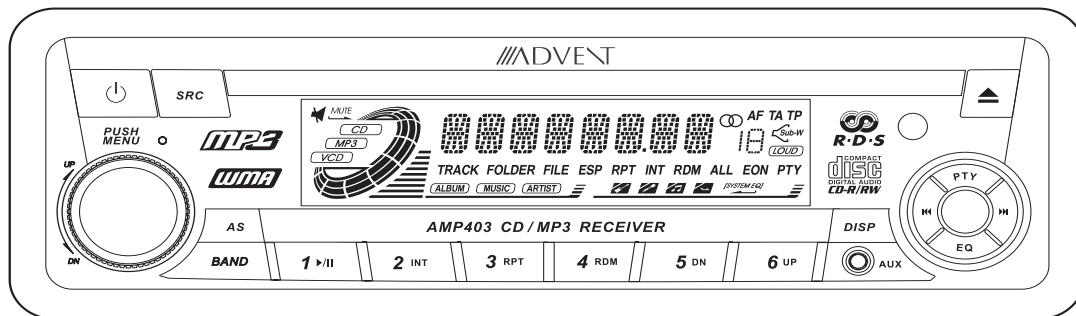

## PREPARATION

### Getting Started

It's a good idea to read all of the instructions before beginning the installation.

#### Contents

Installation Instructions.....	3
Wiring .....	5
Operating Instructions .....	6
CD Player Operating Instructions.....	11
MP3 Player Operation .....	13
Care and Maintenance.....	14
Specifications .....	15

### Installation Requirements

This unit is designed for installation in cars, trucks and vans with an existing radio opening. In many cases, a special installation kit will be required to mount the radio to the dashboard. These kits are available at electronics supply stores and car stereo specialty shops. Always check the kit application before purchasing to make sure the kit works with your vehicle. If you need a kit but cannot locate one, call our customer support line at 1-800-645-4994. (U.S.A. and Canada only.)

### Tools and Supplies

The following tools and supplies are needed to install the radio.


- Torx type, flathead and Philips screwdrivers
- Wire cutters and strippers
- Tools to remove existing radio (screwdriver, socket wrench set or other tools)
- Electrical tape
- Crimping tool
- Volt meter/test light
- Crimp connections
- 18 gauge wire for power connections
- 16-18 gauge speaker wire

### Speaker Requirements

Only connect speakers rated with a load impedance of 4 ohms. Speakers with a load impedance of less than 4 ohms could damage the unit.

### Disconnect Battery

Before you begin, disconnect the battery negative terminal.

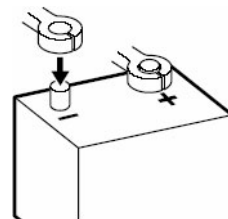


### Toll-Free Installation Assistance

If you require assistance, contact Technical Support at 1-800-645-4994 from 9:00 a.m. to 6:00 p.m. EST Monday through Friday (U.S.A. and Canada only.)

## INSTALLATION INSTRUCTIONS

### Using the Mounting Sleeve

1. Slide the mounting sleeve off the chassis. If it is locked into position, use the removal tools (supplied) to disengage it.
2. Check the dashboard opening size by sliding the mounting sleeve into it.

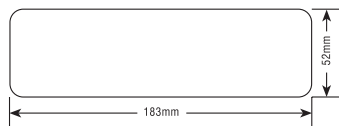



If the opening is too small, carefully cut or file as necessary until the sleeve easily slides into the opening. Do not force the sleeve into the opening or cause it to bend or bow. Check for sufficient space behind the dashboard for the radio chassis.

3. Locate the series of bend tabs along the top, bottom, and sides of the mounting sleeve. With the sleeve fully inserted into the dashboard opening, bend as many of the tabs outward as necessary to firmly secure the sleeve to the dashboard.

**CAUTION:** For proper operation of the CD player, the chassis must be mounted within 20° of horizontal. Make sure the unit is mounted within this limitation.

4. Place the radio in front of the dashboard opening so the wiring can be brought through the mounting sleeve. Follow the wiring diagram carefully and make certain all connections are secure and insulated with wire nuts or electrical tape. After completing the wiring connections, turn the unit on to confirm operation (vehicle ignition must be on). If the unit does not operate, re-check all wiring until the problem is corrected.
5. Make sure the radio is right-side up, then carefully slide the radio into the mounting sleeve until it is fully seated and the spring clips lock it into place.

6. Secure the rear of the unit to the car body using the mounting bolt and rubber cushion.
7. Install the plastic trim ring (optional).
8. Test the radio using the Operating Instructions that follow.

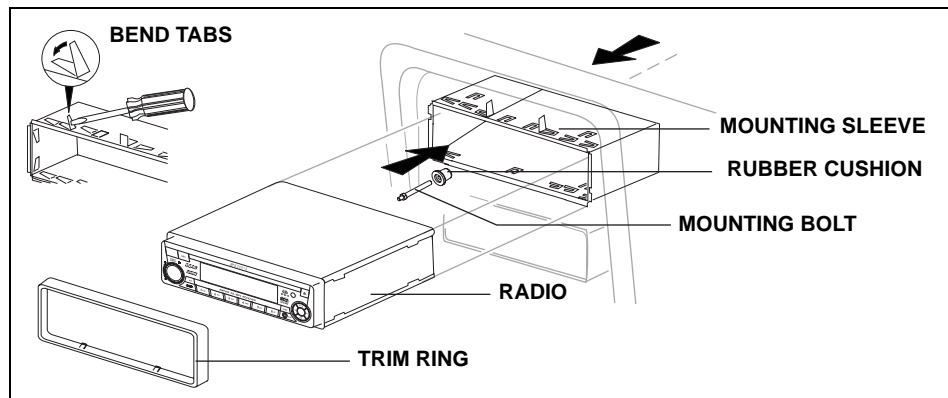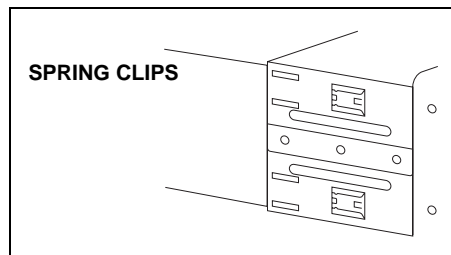

## INSTALLATION INSTRUCTIONS

### Installation Using a Kit


If your vehicle requires the use of an installation kit to mount this radio, follow the instructions included with the installation kit to attach the radio to the mounting plate supplied with the kit.

1. Wire and test the radio as described in step 4 of "Using the Mounting Sleeve".
2. Install the radio mounting plate assembly to the sub-dash-board according to the installation kit instructions.
3. Attach the support strap to the radio and dashboard as described in step 6 of "Using the Mounting Sleeve".
4. Replace the dashboard trim panel.

### ISO Installation

This unit has threaded holes in the chassis side panels which may be used with the original factory mounting brackets of some Toyota, Nissan, Mitsubishi, Isuzu, Hyundai and Honda vehicles to mount the radio to the dashboard. Please consult with your local car stereo specialty shop for assistance on this type of installation.

1. Remove the existing factory radio from the dashboard or center console mounting. Save all hardware and brackets as they will be used to mount the new radio.

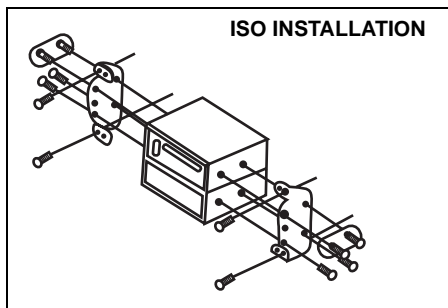

2. Carefully unsnap the plastic frame from the front of the new radio chassis. Remove and discard the frame.
3. Remove the factory mounting brackets and hardware from the existing radio and attach them to the new radio.


**CAUTION: Do not exceed M5 X 6 MM screw size. Longer screws may touch and damage components inside the chassis.**

4. Wire the new radio to the vehicle as described in step 4 of "Using the Mounting Sleeve".
5. Mount the new radio assembly to the dashboard or center console using the reverse

procedure in step 1 of "Using the Mounting Sleeve".

### Removing the Radio

To remove the radio after installation, remove the trim ring by lifting in the center and pulling it off from either side. Insert the removal keys straight back until they lock, then pull the radio out. If removal keys are inserted at an angle, they will not lock properly and will not release the unit.

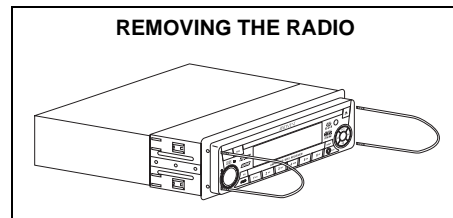


## WIRING

**WARNING!** Never combine (bridge) outputs for use with 1 speaker.

**WARNING!** Never ground negative speaker leads to chassis ground.

**CAUTION:** Failure to wire exactly as shown may cause electrical damage to the radio.

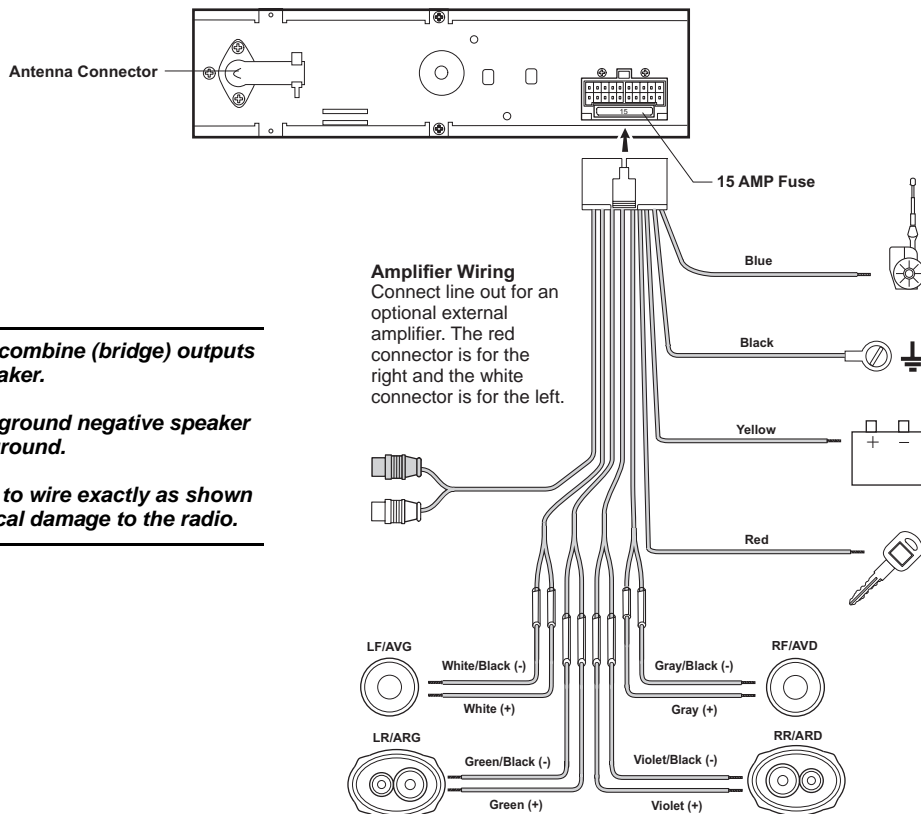

### Power Antenna

Connect to power antenna or amplifier. If not used, tape bare end of wire.

### Ground

Connect to ground terminal.

### Memory/Battery

Connect to battery or 12 volt power source that is always live. The radio will not work if this wire is not connected.

### Accessory/Ignition

Connect to existing radio wire or radio fuse.

### Fuses

When replacing a fuse, make sure the new fuse is the correct type (AGC) and amperage. Using an incorrect fuse could damage the radio.

## OPERATING INSTRUCTIONS

### ① Power On/Off Button

Press the **⏻** button (1) to turn the unit on when the vehicle ignition switch is on. *Press and hold* the **⏻** button to turn the unit off.

### ① Audio Mute

Press the **⏻** button (1) to mute the volume from the system. "MUTE" will appear on the display panel and the volume will be muted. Press the **MUTE** button again, or rotate or press the **VOL/MENU** control (3) to return the volume level to the setting in use before the Mute function was activated.

### ② Liquid Crystal Display Panel

The Liquid Crystal Display (LCD) panel displays the frequency, time and all activated functions, including a circular signal level indicator.

**NOTE: It is a characteristic of LCD panels that, if subjected to cold temperatures for an extended period of time, they may take longer to illuminate than under normal conditions. In addition, the visibility of the numbers on the LCD may slightly decrease. The LCD read-out will return to normal when the temperature inside the vehicle increases to a normal range.**

### ③ Volume Control

To increase or decrease the volume level, rotate the **VOL/MENU** control (3). The volume will increase/decrease and the level will be shown on the display panel from a minimum of "VOL 0" to a maximum of "VOL 46". The display will automatically return to the normal indication 5 seconds after the last volume adjustment or when another function is activated. This control is also used to adjust the bass, treble, balance and fader levels.

### ③ Audio Controls

To adjust the bass, treble, balance and fader, press the **VOL/MENU** control (3) until the appropriate audio control appears on the display panel. Within five seconds, rotate the **VOL/MENU** control to adjust the audio settings for the selected function.

Table 1: Audio Controls

Control	Settings
BASS	BAS -6 to BAS +6, BAS 0 represents a flat response
TREBLE	TRE -6 to TRE +6, TRE 0 represents a flat response.

Table 1: Audio Controls

Control	Settings
BALANCE	12L (full left) to 12R (full right), BAL L = R represents an equal balance level between the left and right speakers
FADER	12R (full rear) to 12F (full front), FAD F = R represents an equal balance level between the rear and front speakers

### ③ System Menu

*Press and hold* the **VOL/MENU** button (3) to access the system menu. Press the **VOL/MENU** button multiple times to view menu options in the following order: LOUD ON/OFF > 12/24 HOURS > VOL LAST/ADJ > BEEP ON/OFF > AREA SET > DX (distant)/LOC. Rotate the **VOL/MENU** button to view menu item settings and press to select.

#### Loud On/Off

When listening to music at low volumes, this feature will boost the bass and treble ranges to compensate for the characteristics of human hearing.

#### 12/24 Hours

This option allows selection of a 12 hour or 24 hour clock format. "12 HOUR" is the default

setting. Turn the rotary encoder to change to the 24 hour clock format.

#### ***Vol Last/Adj***

- **Last**

When the unit is turned on, the volume will resume at the level selected when last turned off.

- **Adjust**

After selecting "VOL ADJ", press the MENU button to select "V-ADJ 10" and then turn the rotary encoder (3) to select the desired turnon level (0-46). When this option is selected, the unit will revert to the adjusted volume each time the unit is turned on.

#### ***Beep On/Off***

- BEEP ON: Audible Beep is turned on
- BEEP OFF: Audible Beep is turned off

#### ***Area Set***

This option allows you to select the appropriate frequency spacing for your area. "U.S.A." is the default setting. Turn the rotary encoder to select "EUROPE", if needed.

#### ***Local/Distance (LOC/DX)***

This option allows for better reception of radio stations based on varying conditions. The default setting is DX. However, when the signals are weak or intermittent, you can select the Local (LOC) mode, which favors access to local stations whose signals are much stronger, thereby improving radio reception.

### **④ Equalizer (EQ)**

The preset equalizer applies preset sound effects to the unit's audio output signal. Press the **EQ** button (4) to select from the following preset Equalizer options:

**Table 2: Equalizer Options**

	DSP OFF
	DSP POP
	DSP ROCK
	DSP CLAS (classic)
	DSP FLAT

### **⑤ Mode Button (SRC)**


Press the **SRC** button (5) to change between radio, CD, or AUX play. When a CD is playing, you can press this button to revert to radio operation.

### **⑥ Auxiliary Input**

To access an auxiliary device:

1. Connect the portable audio player to the **AUX** interface on the front panel (6).
2. Press the **SRC** button (5) to select Aux In mode.

Press **SRC** again to cancel Aux In mode and go to the next mode.

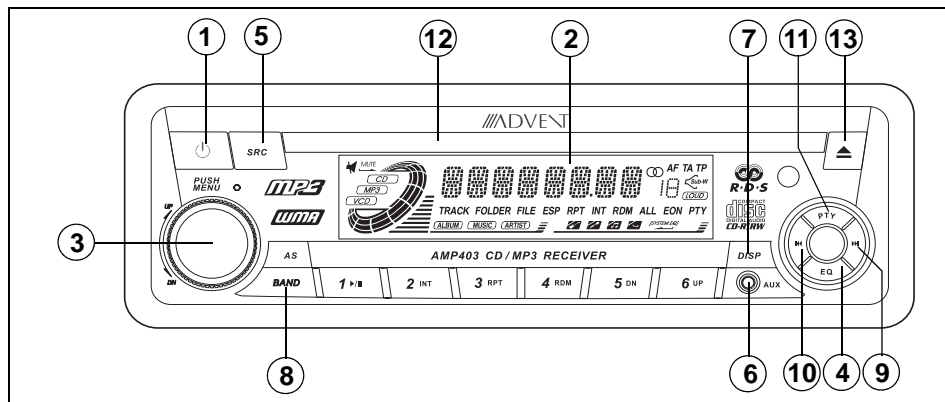





## TUNER INSTRUCTIONS

### ⑧ AM/FM Band Selector (BAND)

During radio play, press the **BAND** button (8) to choose between three FM and two AM bands. The indications “AM” or “FM” appear on the display panel according to your selection.

### ⑨ Up Tuning

Press the seek **>>|** (9) to tune to the next available station.

*Press and hold* the seek **>>|** button (9) to activate manual tuning. You can then use the tune/track buttons to tune stations upward step-by-step.

The current frequency will be shown in digital format on the display panel.

---

**NOTE: When tuning in a station, always adjust the control so that the correct broadcast frequency is shown on the display and you are receiving a clear signal. If the radio is tuned off-frequency, you could experience distorted audio, noise and other reception problems.**

---

### ⑩ Down Tuning

Press the seek down **|<<** button to tune to the previous available station.

*Press and hold* the seek down **|<<** button (10) to activate manual tuning. You can then use the tune/track buttons to tune stations downward step-by-step.

### ⑪ Auto Store

Press the **AS** button (11) to automatically select six strong stations and store them in the current band. The new stations replace stations already stored in that band.

### ⑫ PTY (Program Type)

PTY defines the type of program being broadcast, when applicable. Not all stations are broadcast with PTY information. You can use the PTY function to play stations broadcast in the following categories:

- All PTY (any station with PTY information is searched)
- Traffic (the TA (Traffic Announcement) icon appears lit when a station broadcasting PTY Traffic Reports is selected)
- News
- Information
- Sports

- Talk
- Rock
- Classic Rock
- Adult Hits
- Soft Rock
- Top 40
- Country
- Oldies
- Soft
- Nostalgia
- Jazz
- Classical
- Rhythm and Blues
- Soft Rhythm and Blues
- Language (foreign)
- Religious Music
- Religious Talk
- Personality
- Public
- College
- Weather
- Emergency Test
- Emergency

To search for stations in a PTY category:

1. Press the **PTY** button (12) to view the current PTY category.
2. Use the **>>|/|<<** buttons (9, 10) to move through the list of available categories.
3. After 2 seconds of inactivity, the radio will automatically scan and play the first station it locates in the selected category.

If no stations are found within the searched PTY category, the display will read "NO PTY".

---

***NOTE: PTY is a new broadcast technology that may not be extensively available in your area.***

---

## CD PLAYER OPERATING INSTRUCTIONS

### 13 Inserting a Disc

With the label surface facing up, fully insert a compact disc into the disc slot (13) until the mechanism engages and pulls the disc in.

While loading, "CD READ" will appear on the display. Play will automatically begin from the first track on the disc.

**NOTE: The unit is designed for play of standard 5" (12 cm.) compact discs only. Do not attempt to use 3" (8 cm.) CD singles in this unit, either with or without an adaptor, as damage to the player and/or the disc may occur. Such damage will not be covered by the warranty on this product.**

### 20 Disc Eject Button

Press the eject ▲ button (20) to stop disc play and eject the disc. The unit will revert to radio operation. Discs may be ejected with the vehicle ignition switch on or off. If an ejected disc is not removed from the disc slot within 10 seconds of being ejected, the disc will be re-inserted automatically.

**NOTE: To prevent a disc from accidentally being damaged, always remove the disc from the unit when disc play is finished.**

### 14 CD Play/Pause Selector

Press the 1/2/II button (14) to freeze disc playback. Press 1/2/II again to resume disc playback.

### 9 Seek Up/Next Track


Press the next track >>| button (9) during disc play to select the beginning of the next track.

### 10 Seek Down/Previous Track

Press the previous track |<< button (10) during disc play to select the beginning of the current track. Press twice to select the beginning of the previous track.

### 9, 10 Cue/Review Functions

High-speed audible search to any section of the disc can be made by the Cue and Review functions. Press and hold the next track >>| button (9) to advance rapidly in the forward direction or the previous track |<< button (10) to advance rapidly in the backward direction.

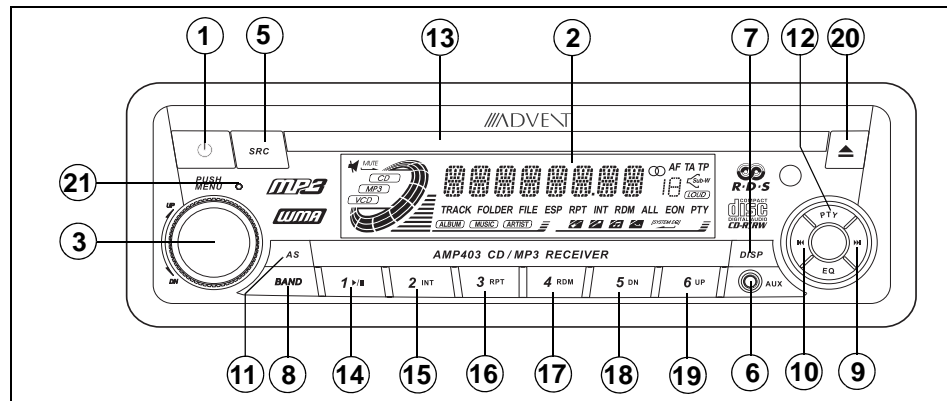

## CD PLAYER OPERATING INSTRUCTIONS

### 15 Intro Play Selector


During disc play, press the **2/INT** button (15) to select "INT ON" and play the first 10 seconds of each track. Press **2/INT** again to select "INT FOLD" and play the first 10 seconds of each track in the current folder. When a desired track is reached, press the **2/INT** button to select "INT OFF" and play the current track.

### 16 Track Repeat Play Select

During disc play, press the **3/RPT** button (16) to select "RPT ON" and repeatedly play the selected track. Press **3/RPT** again to select "RPT FOLD" and repeatedly play all tracks in the current folder. Repeat play will continue until **3/RPT** is pressed to select "RPT OFF".

### 17 Random Play Select

During disc play, press the **4/RDM** button (17) to select "RDM ON" and play all tracks on the disc in random, shuffled order. Press **4/RDM** again to select "RDM FOLD" and randomly play all songs in the current folder. In Random Play mode, you can press the tune/track buttons (9 and 10) to select tracks in a random order instead of the normal progression. Press **4/RDM** again to select "RDM OFF" and cancel Random Play mode.

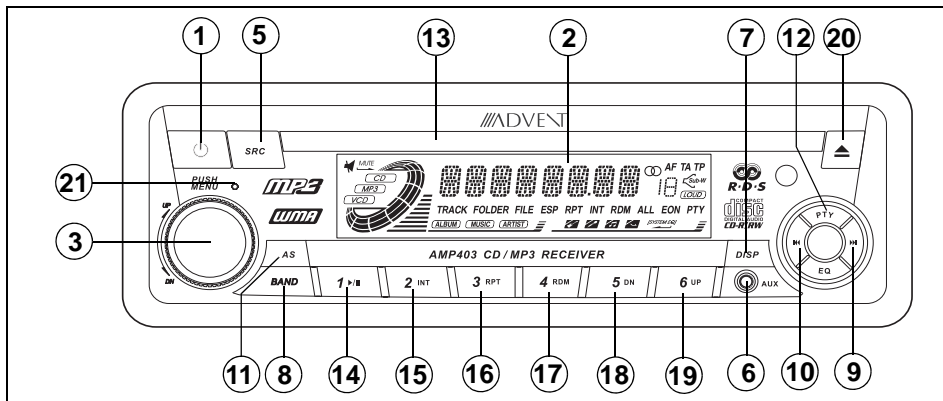

## PLAYING MP3/WMA FILES

*Instructions for Insert/Eject, Play/Pause and Track Selection are the same for CD and MP3/WMA operation. Please see the CD Player Operation section for information about these topics.*

### ⑦ Display Information

During playback, press the **DISP** button (7) to display file information in the following order: FOLDER, FILE, MUSIC, ARTIST, ALBUM and Track Number/Elapsed Time.

- FOLDER: Folder name
- FILE: File name followed by the format (MP3 or WMA)
- MUSIC: ID3 - song name
- ARTIST: ID3 - artist name
- ALBUM: ID3 - name of the album, if available
- Track Number/Elapsed Time
- Clock

### ⑱, ⑲ Folder Up/Down

Press the **5/DN** button (18) to go to the previous folder. Press the **6/UP** button (19) to go to the next folder.

### ⑪ Direct Song/File Access

1. Press the **AS** button (11) once to enable direct track searching.
2. Rotate the **VOL/MENU** control (3) to enter a digit in the third position.
3. Press the **VOL/MENU** control (3) to confirm entry and the second digit will flash.
4. Rotate the **VOL/MENU** control to select the second digit.
5. Repeat above steps to enter the first digit, if necessary.  
*NOTE: The unit will only allow the selection of digits that correspond with the number of files on the media you are searching.*
6. Once the track number appears on the screen, press the **VOL/MENU** control to play the selected song/file.

### ⑪ Searching Folders/Files

1. Press the **AS** button (11) twice to access the "NAVIGATE" option.
2. Rotate the **VOL/MENU** control (3) to select the desired directory/song. If a directory is present, "FOLDER" appears in the display.
3. Press the **VOL/MENU** control (3) to view the files inside the selected directory. "FILE" appears in the display, indicating that a directory has been selected for searching.

4. Rotate the **VOL/MENU** control to select the song/file.

Press the **VOL/MENU** control to play the selected song/file.

### ⑪ Searching by Name (CHAR-SCH)

1. Press the **AS** button (11) three times to access the "CHAR-SCH" option.
2. Rotate the **VOL/MENU** control to select the characters A-Z, \_ , - , + , and 0-9 for the first character.
3. Press the **VOL/MENU** control to confirm entry of the character and move to the next position.
4. Repeat for up to eight characters.
5. *Press and hold* the **VOL/MENU** control for 0.5 seconds to begin the search.
6. If a directory is found, rotate the **VOL/MENU** control to select the song/file in this directory/folder.
7. *Press and hold* the **VOL/MENU** control for 0.5 seconds to play the selected song/file. "NO MATCH" appears if there is no file beginning with the search string entered.

## CARE AND MAINTENANCE

Your new radio/CD player does not require any maintenance. However, proper understanding of its use and handling will help you obtain maximum enjoyment of its capabilities. We recommend that you keep this manual for reference on the many features of this unit as well as how to set the clock. The following points should be observed:

- When cleaning the interior of the vehicle, do not get water or cleaning fluids on the unit.
- The CD player is a precision instrument and will not operate properly in extreme heat or cold. If such conditions occur, wait until the interior of the vehicle reaches a normal temperature before using the player.
- If the temperature inside the player gets too hot, a protective circuit will automatically stop play of the disc. In this case, allow the unit to cool before operating the player again.
- Never insert anything other than a 5" (12 cm) compact disc into the player as the mechanism can be damaged by foreign objects.
- Do not attempt to use 3" (8 cm) CD-Single discs in this unit, either with or without an adaptor, as damage to the player and/or disc may occur. Such damage will not be covered by the Warranty on this product.

- When not using the disc player, always remove the compact disc. Do not leave an ejected disc sitting in the disc slot as this can expose it to sunlight and other causes of damage.
- Do not attempt to open the unit chassis. There are no user-serviceable parts or adjustment points inside.
- When the vehicle warms up during cold weather or under damp conditions, condensation may appear on the lens of the disc player. Should this occur, the player will not operate properly until the moisture has evaporated.
- The unit is designed with a vibration dampening CD mechanism to minimize interruption of disc play due to normal vibration. When driving on rough roads, however, occasional sound skips may occur. This will not scratch or damage the disc and normal play will resume when the rough conditions cease.

### Handling Compact Discs

Dirt, dust, scratches and warping can cause skips in the playback and deterioration of sound quality. Please follow these guidelines to take care of your compact discs:

- Carefully wipe fingerprints, dust and dirt from the disc's playing surface with a soft cloth.

Wipe in a straight motion from the center to the outside of the disc.

- Never use chemicals such as record sprays or household cleaners to clean CDs, as they can irreparably damage the disc's surface.
- Discs should be kept in their storage cases when not in use.
- Do not expose discs to direct sunlight, high temperatures or high humidity for long periods.
- Do not stick paper, tape or labels on disc surfaces.

---

### RESET BUTTON

***A Reset button (21) is located on the front of the radio, below the SRC button. The Reset function should only be activated under the following circumstances: Upon initial installation after all wiring is completed; If there is a malfunction of any of the switches on the unit, pressing the Reset button may clear the system and return to normal operation.***

---

## SPECIFICATIONS

### CD-R and CD-RW Capability

Depending on media type and method of "recording/burning", some CD-R/RWs may be incompatible with this unit. After "recording/burning", **the session must be closed**. Please refer to your software's recommended procedures for closing a disc/session. Review your recording software to familiarize yourself with the correct "recording/burning" procedures. We recommend using the latest versions of ROXIO™ or NERO™ burning software. This unit will only recognize the **CDDA (Compact Disc Digital Audio), .MP3 and .WMA** formats "recorded / burned" onto a CD-R/RW. This unit does not support .WAV, .OGG or other formats.

### Technical Specifications



#### CEA Power

Power Output: 13 watts RMS X 4 channels into 4-ohms @  $\leq 1\%$  THD+N  
 Signal to Noise Ratio: 70dB below reference.  
 (Reference: 1 watt, 4-ohms)  
 Frequency Response: 20Hz to 20kHz, -3dB  
 (Aux Input used as reference input)  
 Reference Supply Voltage: 14.4VDC

#### CD Player

Compatible Disc Media: CD-R / RW  
 Compatible Media Formats: CD-DA, MP3, WMA  
 Signal to Noise Ratio @ 1 kHz: >90dB  
 Frequency Response: 20Hz to 20 kHz, -3dB  
 Channel Separation: > 60dB @ 1 kHz  
 D/A Converter: 1bit/ channel

#### FM Tuner

Tuning Range: 87.5MHz - 107.9MHz  
 Mono Sensitivity (-30dB): 11dBf

Quieting Sensitivity (-50dB): 15dBf  
 Signal to Noise Ratio @ 1 kHz: 58dB  
 Stereo Separation @ 1 kHz: >30dB  
 Frequency Response: 30Hz - 12kHz, -3dB

#### AM Tuner

Tuning Range: 530 kHz - 1710 kHz  
 Sensitivity (-20dB): 15uV  
 Signal to Noise Ratio @ 1 kHz: 50dB  
 Frequency Response: 50Hz - 2kHz, -3dB

#### Auxiliary Input

Input Sensitivity: 400mV RMS for 1 watt RMS into 4-ohms  
 Frequency Response: 20Hz to 20kHz, -3dB  
 Input Impedance: 10k ohms

#### General

Power Supply: 11 to 16VDC, negative ground  
 Power Antenna (Blue): 500mA max, current limited protection  
 Operating Temperature: -20C ~ 65C  
 Fuse: 15-amp, ATO type  
 DIN chassis dimensions: 7" X 7" X 2" (178mm x 178mm x 50mm)

**Specifications subject to change without notice.**





## Limited Warranty

*CD or Multimedia Radios/Headunits*

## DO NOT RETURN THIS PRODUCT TO THE STORE

Audiovox Electronics Corporation ("the Company") is committed to quality and customer service, and are pleased to offer you this Warranty. Please read it thoroughly and contact the Company at 1-800-323-4815 with any questions.

### **Who is covered?**

The Company extends this warranty to the original retail purchaser of products purchased through an authorized Advent retailer or distributor in the U.S.A., Puerto Rico or Canada. This warranty is not transferable or assignable. Proof of purchase is required in the form of an original sales receipt.

### **What is covered?**

The Company warrants that should this product or any part thereof, under normal use, be proven defective in material or workmanship within three years from the date of original purchase, such defect(s) will be repaired or replaced with a new or reconditioned product (at the Company's option) without charge for parts and repair labor.

### **What is not covered?**

This Warranty does not cover the following:

- Damage incurred during shipping or transporting the product to the Company or a service center
- Elimination of car static or motor noise
- Defects in cosmetic, decorative or non-operative structural parts
- Correction of antenna problems
- Costs incurred for installation, removal or reinstallation of the product
- Consequential damage to compact discs, USB devices, digital media cards, accessories or vehicle electrical systems
- Damage caused by improper installation, mishandling, misuse, neglect, accident, blown fuse, battery leakage, theft or improper storage
- Products whose factory serial number/bar code label(s) or markings have been removed or defaced
- Damage resulting from moisture, humidity, excessive temperature, extreme environmental conditions or external natural causes

Please review the "Care and Maintenance" section of your Installation and Operation Manual for additional information regarding the proper use of your product.

### **Limitations**

THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITHIN A PERIOD OF 24 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state to state.

### **Obtaining Warranty Service**

- To obtain repair or replacement within the terms of this Warranty, call 1-800-323-4815 for the location of a warranty station serving your area.
- You must prepay the initial shipping charges to the Company. The Company will pay the return shipping charges for all warranted products returned to an address within the U.S.A., Puerto Rico or Canada.
- Please package the product securely to avoid shipping damage. We recommend using a carrier that provides tracking service to prevent lost packages. Lost or damaged packages are not covered by this warranty.
- Provide a detailed description of the problem(s) for which you require service.



Audiovox Electronics Corporation  
150 Marcus Boulevard  
Hauppauge, NY 11788  
1-800-323-4815  
[www.audiovox.com](http://www.audiovox.com)

©2007 Audiovox  
v.112707